

Terminals

Terminal shapes vary from one battery to another. **Identifying the correct replacement battery from the listing in this book assures the proper terminal configuration.** For custom applications, refer to the following chart to identify terminal shape and corresponding batteries.

Terminal Shape				Battery Type					
Type	Front	Side	Top						
1				CB14L-A1					
2				CB16AL-A2 12N5.5-4A					
3				YB7CA C60-N24L-A					
4				CB12C-A GTZ12S GTX20L-BS GT16-BS GTZ10S GT14B-4 CB9L-A2 C50-N18L-A3 YCB30L-B GTX20-BS GT12B-4 GT9B-4 CB16CL-B GTX18L-BS SC50-N18L-A3 GT16L-BS GT7B-4 GTZ14S					
5				CB4L-A GTX5L-BS GTX9-BS CB4L-B GTX7A-BS GTX12-BS GTX4L-BS GTX7L-BS GTX14-BS					
6				B38-6A CB12A-A 6N11A-1B B39-6 CB12AL-A 6N12A-2D CB3L-A CB14A-A 12N5-3B 12N9-3A-1 CB3L-B CB16L-B 12N5-4B 12N9-3B CB5L-B SCB16L-B 12N5.5-3B 12N9-4B-1 CB7-A CB16-B 12N5.5A-3B 12N10-3A-2 CB9-B 6N6-3B 12N7D-3B 12N10-3B CB9A-A 6N6-3B-1 12N7-3B 12N12A-4A-1 CB9L-B 6N8-3B 12N7-4A 12N16-3B CB10L-B 6N11-2D 12N7-4B					
7				CB18-A CB18L-A					
8				CB10A-A CB12B-B2 CB14L-A2 GT14-BS 12N24-3 CB10A-A2 CB14-A2 CB14L-B2 GT14L-BS HCB16A-A CB10L-A2 CB14-B2 SCB14L-A2 12N14-3A CB10L-B2 CB14A-A2 SCB14L-B2					
9				CHD4-12					
10				YG1X30 GTZ7S					
11				CB7L-B 12N10-3B-1 12N16-4B					