

SPECIFICATIONS

Max.Capacity	135 kg
Max Height	870 mm
Min Height	350 mm
Platform Size	410x350mm
Net Weight	29 kg
Gross Weight	31 kg


CAUTION

1. The maximum load is 135kg. **DO NOT** exceed this rated capacity.
2. Use this lift for lifting purpose only.**DO NOT** use it for any other purpose it is not designed to perform.
3. Keep children and unauthorized persons away from the work area.
4. Only use this lift on a surface that is stable, level,dry and not slippery,and capable of sustaining the load. Keep the surface clean, tidy and free from unrelated materials and ensure that there is adequate lighting.
5. Before lifting ensure the motorcycle is adequately secured to the lifting platform with threadade knobs,big washers,J-hooks and U-bolts.
6. When the platform has been ised to the working height,ensure the locking bar is engaged to prevent accidental lowering.
7. Always keep your heads and feet away from moving parts.

300 LBS MOTORCYCLE
LIFT TABLE
INSTRUCTION



PARTS LIST		
Part No.	Description	Qty
1	Rubber pad	1
2	Steel plate	1
3	Upper frame	1
4	Damping nut M8	8
5	Threadcd knob	2
6	Washer	2
7	U-bolt	2
8	J-hook	2
9	Upper roller	2
10	Fixing block	8
11	Lower roller	2
12	Pump	1
13	Bolt M 10	1
14	Foot pedal pad	1
15	Foot pedal	1
16	Pin shoft	1
17	Release foot pedal	1
18	Conncting plate	1
19	Conncting plate	1
20	R-pin	2
21	Lock washer M8	2
22	Bolt M 8x 16	2
23	Locking bar	1
24	Base farne	1
25	Damping nut M5	8
26	Washer M5	8
27	Bolt M 5 x 40	8
28	Damping nut M4	1
29	Washer M8	1
30	Bolt M 8x 12	1
31	Damping nut M10	1
32	Lifting arm assy	1

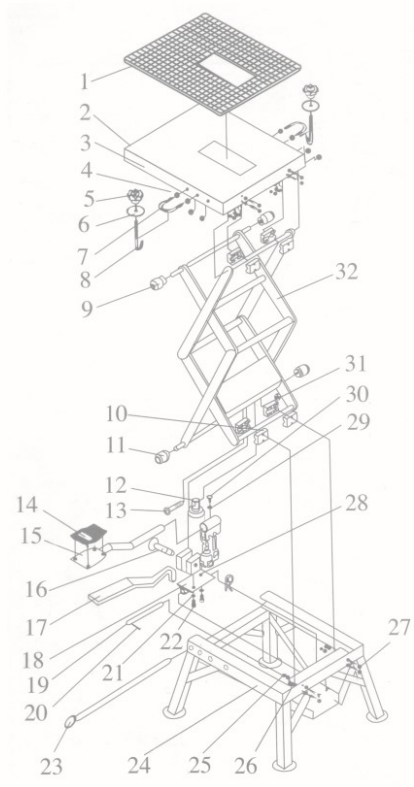

MAINTNANCE

- 1 When not in use,the lift must be stored in the lowest position in a dry location to minimize ram and piston corrosion.
- 2 Keep the lift clean and wipe off any oil or grease. Lubricate all moving parts.
- 3 Periodically check the ram and piston for sings of corrosion. Clean exposed areas with a clean oiled cloth.
- 4 Before each use check all parts.If any part of the lift is damaged or suspect,remove the lift from service and take necessary action to repair.
- 5 When lift efficiency drops, open the release valve and pump the lift foot pedal rapidly 15 to 20 times to purge away air from the hydraulic syst

personal injury.

1. When work is done, check under lift and motorcycle to ensure that there are no obstructions and that it is safe to lower the unit.remove te locking bar and then SLOWLY turn the release valve to GENTLY lower the lift.
2. **DO NOT** allow untrained persons to operate the lift.
3. **DO NOT** make any modifications to this motorcycle lift.
4. **DO NOT** expose the lift to rain or snow.
5. Ensure that you read, understand and apply the safety instructions and warnings before use. Failure to heed these instructions may result in properly damage and/or