


148MM

210MM

# Motorcycle Mid-Lift



## Mounting Instruction

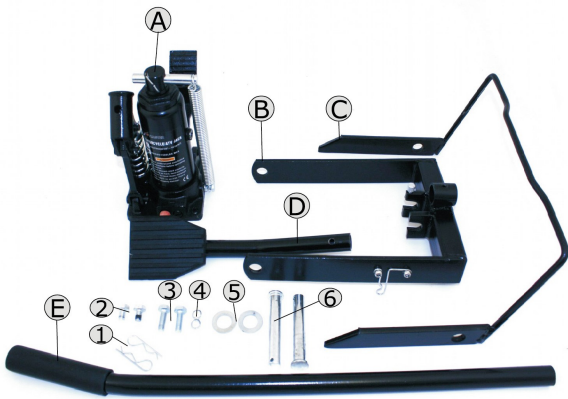


| Position | Included in delivery | Quantity |
|----------|----------------------|----------|
| A        | Lifting cylinder     | 1        |
| B        | Lifting frame        | 1        |
| C        | Safety lock          | 1        |
| D        | Foot pedal           | 1        |
| E        | Tie rod              | 1        |
| 1        | Safety splint        | 2        |
| 2        | Screw M8x20          | 2        |
| 3        | Screw M8x40          | 2        |
| 4        | Spring washer        | 2        |
| 5        | Washer               | 2        |
| 6        | Bolt                 | 4        |


**Step 1:** Install the lifting cylinder **A** on the base carrier and attach it with the screws **2** M8x20.



**Step 2:** Attach the lifting frame **B** and the safety lock **C**.

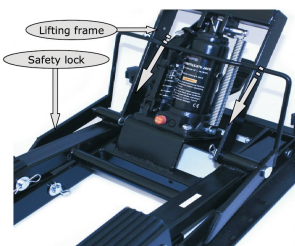

**Step 3:** Attach the bolts **6** and secure them with the shims **5** and splints **1**.

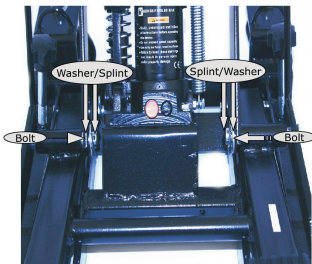

**Step 4:** Attach the lifting pedal **D** and the tie-rod **E** and secure them with the screws **3** M8x40.

